

Terms and conditions of use and maintenance

1. The Toolbox should be mounted on a hard and stable surface. Base fastening should be made by means of expansion anchors or threaded rods with nuts, previously permanently embedded in the base.
2. Toolbox should be maintained once a month. The monthly service should include:
 - cleaning of tools metal surfaces with steel care products
 - cleaning the pump rod and then lubricating it
3. Toolbox should be dismantled for the winter time (where freezing occurs).
4. All leaves, stones, papers, rubbish, needles, etc. should be systematically removed from close surroundings.
5. Administrator is obliged to prevent dirt from entering the mechanical elements of the Toolbox (tools, pump) which may damage them (e.g. sand, soil, slush).
6. If the surface of the products is covered with soil, sand, mud or snow, it should be cleaned with cold water. Larger debris can be removed by hand or with a fine-bristled brush.
7. Administrator of the facility is obliged to maintain the station's ongoing service.